


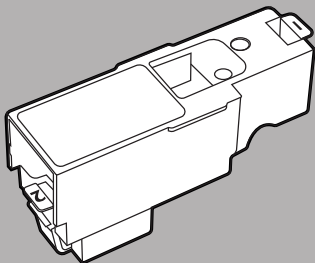

EN **GENERATOR**
REMOVAL & REPLACEMENT

ES **GENERADOR**
RETIRADA Y SUSTITUCIÓN



Specialized Fire Products

SDi, LLC
3535 State Highway 66
Parkway 100 Building 6
Neptune, NJ 07753
USA

Tel: 732-751-9266
sales@sdifire.com
www.sdifire.com

Note:

When replacing the generator, ensure that the unit is switched off before opening the back cover.

Aviso:

Al reemplazar el generador, asegúrese de que la unidad esté apagada antes de retirar la tapa trasera.



EN

REMOVAL

Remove the smoke cartridge from within the generator.

Disengage clip 1 and lift. Repeat for clip 2 to remove the used generator.

When replacing a generator, any dust or debris from the main unit can be removed with an air duster. Any condensation can be removed by wiping with a lint-free cloth.

REPLACEMENT

Insert the generator firmly into the recess, engaging clips 1 and 2.

Once the generator is inserted do not remove it until it is indicated that a replacement is necessary.

ES

RETIRADA

Retire el cartucho de humo del interior del generador.


Desacople la pinza 1 y levántela. Repita el procedimiento con la pinza 2 para retirar el generador usado.

Al reemplazar un generador, puede eliminar el polvo o los residuos de la unidad principal con una pistola de aire. Cualquier condensación puede eliminarse con ayuda de un paño sin pelusas.

SUSTITUCIÓN

Inserte el generador con fuerza en el hueco, acoplado las pinzas 1 y 2.

Una vez insertado el generador, no lo extraiga hasta que no sea necesario reemplazarlo según se indica.

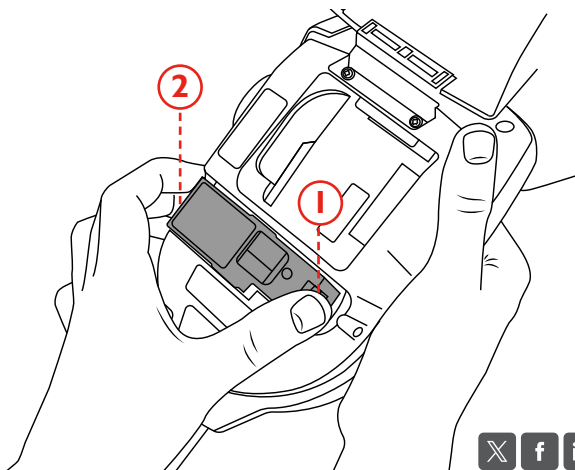

support@detector testers.com

401690-1