
## **6** POWERING ON THE UNIT

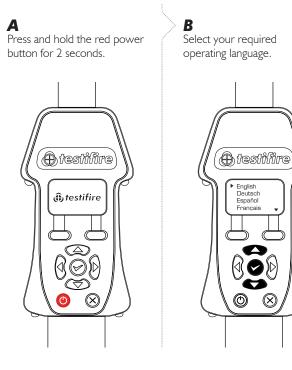

Download the full user manual by scanning the QR code or by visiting detectortesters.com/manuals



## **6** PERFORMING A SINGLE TEST

Select a test from the main menu by moving the cursor.



#### NOTE:

During a smoke test a slight 'popping' sound may be heard. This is normal and part of the test procedure.

### SEQUENTIAL TESTING. SMOKE + HEAT TEST

The test will begin when the head unit is placed over the detector, breaking the infrared beam.

Â

When the detector is activated, remove


return to idle.

Ŕ

Testifire by lowering it gently. Testifire will

Α Press the enter key to select smoke, followed by heat.







The smoke test will begin when the head unit is placed over the detector.

When the detector is activated, remove Testifire by lowering it gently.





D Lower Testifire once the

heat test has completed.

Testifire will return to idle.


heat test.

â 



Press the enter key **<u>Twice</u>** to select each test.

( ) testifire Smoke 1 Heat 1 CO 1 (Ö)

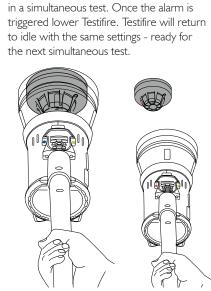

Ŕ


Raise Testifire over the detector. Smoke.

heat and CO are tested at the same time

#### NOTE

The test LED will alternate the colour of all selected test modes when selected for a simultaneous test.



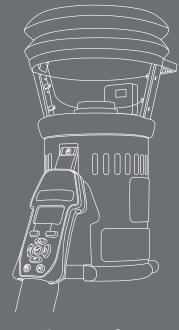

# testifire **QUICK START GUIDE**

www.detectortesters.com/testifire

## **O** CHARGING THE BATTERY

75-90 MINUTE MAX CHARGE

Connect the charger to a power source. Connect the battery baton to the charger and turn the locking ring.

### NOTE:

Always disconnect the battery from the charger as soon as it is fully charged.

## **2** INSERTING THE BATTERY BATON


Align the button with the location hole in the handle and push the Battery Baton into the handle until the button springs up through the hole.

>


#### NOTE:


>

Do not use undue force to insert the battery baton.

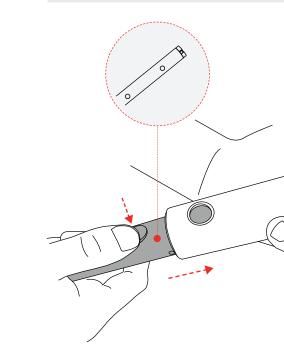


## **3** INSERTING THE SMOKE CAPSULE




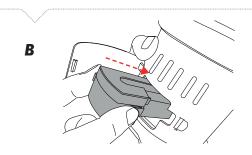





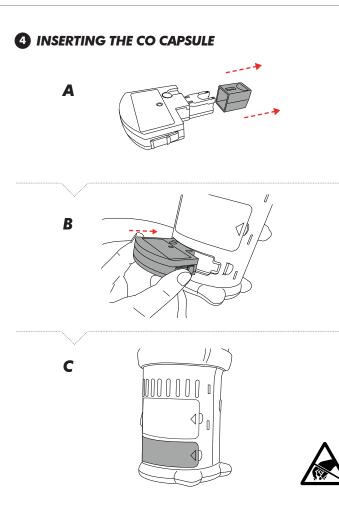

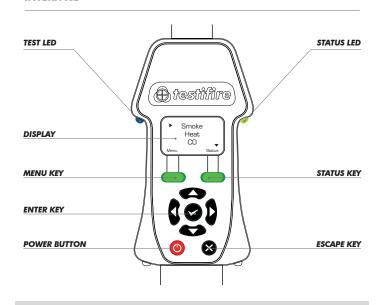

#### LED REFERENCE CHART



detectortesters



00302-3